



Nanoptix PayCheck™ NextGEN

Firmware Upgrading & Recovery Instructions

Nanoptix Inc
Dieppe, NB, Canada
E1A 1P6
1-888-983-3030
www.Nanoptix.com



Date: June 15, 2016 Document#: 700014-0000 Rev 0.9

Section 1: Downloading and Installation

NOTES:


- If you already have a firmware *.zip package in your possession then there is no need to visit the Nanoptix website you can skip directly to Step 5.
- A USB flash drive (or similar USB mass storage device) is required in order to complete the process. The storage capacity of the drive must be between 512MB and 32GB




ESD protection (such as a wrist strap) must be used anytime a PCB is exposed




- 1. Go to www.nanoptix.com and select the "support" section.
- 2. Login using
 - Username: (Please contact Nanoptix for unique Username)
 - Password: (Please contact Nanoptix for unique Password)
 - Click the "login" button

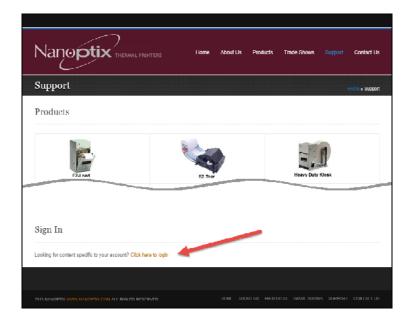

3. Once logged in, click on your product and then navigate to the firmware section.

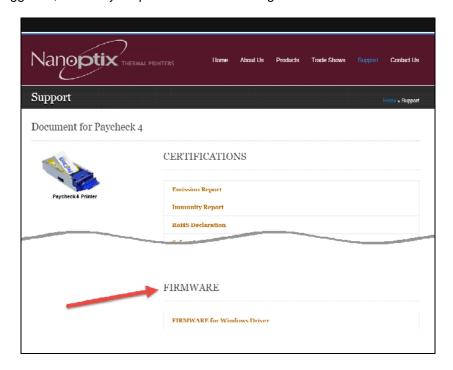

- 4. Select the desired firmware and download it to a known location on your local disk.
- 5. Prepare the USB flash drive by inserting it into one of your computer's USB ports.
- 6. Format the USB flash drive using a FAT32 file system, set the allocation unit size to the default setting and change the volume label to "NPXUSBDNLD"

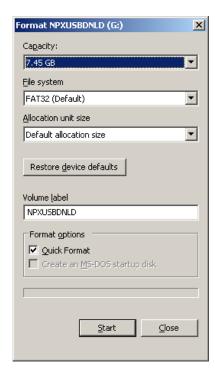

7. Extract the whole content of the ".zip" file previously downloaded in step 4 to the USB flash drive that was prepared previously in step 6 using "Winzip" or the ".zip" extractor of your choosing.



8. Make sure the PayCheck™ NextGen printer is <u>OFF</u> then Insert the USB flash drive in one of the 3 USB host ports and power <u>ON</u> the printer.





- 9. On power up, the red LED will be illuminated, after 15 seconds, the download will start. As confirmation, the printer will emit a beeping sound at approximately a 1 second interval and the green LED will blink at the same speed.
- 10. Since only the sections of firmware that change will be downloaded, the process takes anywhere between 1 second and 6 minutes. Once complete, the speed of the LED and beeping will increase to 3 times per second.
- 11. Once the rapid beeping is heard, the USB flash drive can be removed. The printer will reset and boot up with the newly downloaded version of firmware. This process takes approximately 20 seconds, the llumination of the green LED is a confirmation that the printer is ready.
 Note: Do not disconnect power or communication until the download is complete.

12. As verification a **power on test ticket** can be printed. To print the test ticket, <u>the printer must be powered "ON" while holding the paper feed button for up to 15 seconds</u>. A status ticket similar to below will be printed. Pressing the button again will result in blank tickets. This ticket can be used to verify the *firmware version*.

 Model:
 PAYCHECK NextGen

 Firmware:
 NPG-9.99Z (0x6D00)

Printer Driver Ver: 1.0.1.1

SETTINGS

COMMUNICATION

Protocol: NTL
Interface: Serial
Serila Settings: 9600,8,NONE
Handshaking: XON + RTS
Print mode: Page

NETWORKING

eth0

99.99.99.201

PRINT CONTROL

 Speed:
 200 mm/sec

 BurnTime:
 300 uS

 Motor Current:
 58%

 PRINTER ENVIRONMENTAL CONDITIONS

Voltage: 24.7 Volts
Temperature: 25 Celcius

SYSTEM RESOURCES FLASH Used=00000 Free=65535

LIBRARY INVENTORY (Satandard)
Tpl: 0, 1, 2, 4, 4, 5,6,7,8,9,A,B

Rgn 1, 2, 3, 4, 5, 6, 7, 8, h, 9, A, B, C, D, E, F, G, I, J, K, L, N, O, P, Q, R, S, T, U, Z, X, a,

 $b,\,c,\,d,\,e,\,f,\,g,\,I,\,j,\,k,\,I,\,m,\,n,\,o,\,p,\,q$

Gfx:

LIBRARY INFORMATION

 Board:
 209022-0001R-04

 Board ID:
 5P00122

 Printer ID:
 NG0003C

 Date Code:
 20160505


S|0|PAY-4.82H|@|@|@|I|@|P|

Section 2: Restoring printer's firmware

- A micro SD is required in order to complete the process. The storage capacity of the card must be between 512MB and 32GB
- Win32 Disk Imager is required in order to prepare the micro SD card. The Wind32 Disk Imager software can be downloaded from https://sourceforge.net/projects/win32diskimager/
- 1. Go to www.nanoptix.com and select the "support" section.
- 2. Login using
 - Username: (Please contact Nanoptix for unique Username)
 - Password: (Please contact Nanoptix for unique Password)
 - Click the "login" button




3. Once logged in, click on your product and then navigate to the **firmware** section.

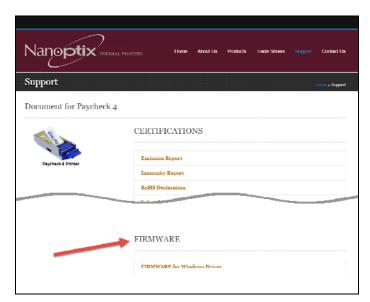


4. Select the desired Image file (XXXXX.img) and download it to a known location on your local disk.

- 5. With the Paycheck NextGen powered off.
- 6. Insert the micro SD card in your card reader and note which drive letter is associated with the micro SD card when it's connected. (Example "G:"). Then start the win32 Disk Imager software.
- 7. Navigate to and select the image file that was downloaded previously in step 4. Select the Device that corresponds to the Micro SD card that was inserted in step 5.

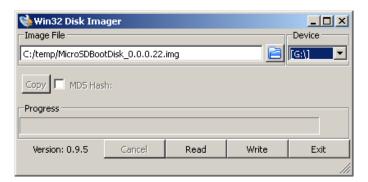

- 8. Click the Write button, when prompted about overwritting the disk, click yes. Once complete, eject the micro SD card.
- 9. On the underside of the Printer put dip Switch 1 into the ON position. This will force the Printer to boot from the Micro SD recovery card.

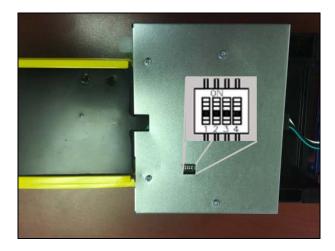

- 10. Insert the micro SD recovery card into the micro SD slot on the front of the printer. An insert the Nanoptix USB download drive (USB flash drive created in section 1) into the Front USB Host port of the printer.
- 13. Power on the printer. the red LED will be illuminated, after 15 seconds, the download will start. As confirmation, the printer will emit a beeping sound at approximately a one second interval and the green LED will blink at the same speed.
- 14. The process takes anywhere between 1 second to 6 minutes. Once complete, the speed of the LED and beep will increase to 3 times per second. At that point, power off the printer and remove the USB flash drive and micro SD cards. Restore dip switch 1 to the OFF position
- 15. Power on the printer and verify the firmware downloaded correctly.

