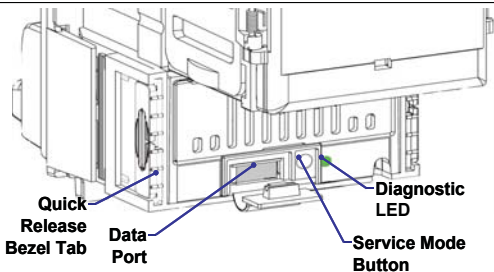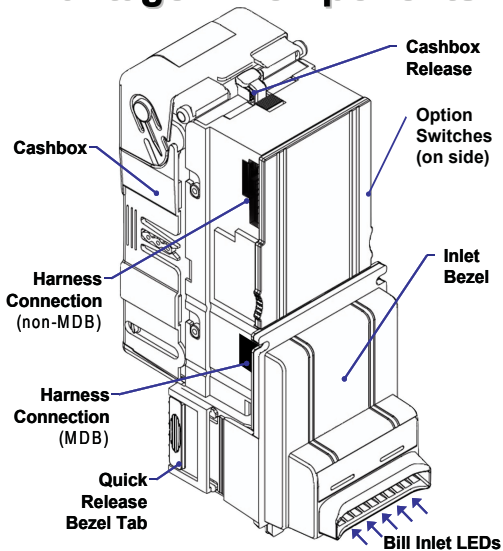# Vantage
## Canadian Bill Acceptor

**Quick Start Guide**



$\equiv$ SUZOHAPP

# Vantage™ Components



Cashbox Release

Cashbox

Option Switches (on side)

Harness Connection (non-MDB)

Inlet Bezel

Harness Connection (MDB)

Quick Release Bezel Tab

Bill Inlet LEDs

Quick Release Bezel Tab

Data Port

Diagnostic LED

Service Mode Button

# **Diagnostic Flash Codes**

| | Flash Code | Validator Status |
|---|---|---|
| **Operational** | GRN (solid) | Sales Mode / OK |
| | GRN x 1 | Coupon Teach |
| | GRN x 2 | Service Mode |
| **Warning** | YEL x 1 | Clean Unit |
| | YEL x 2 | Service Unit |
| **Out of Service** | RED x 1 | Cashbox Full |
| | RED x 2 | Clear Bill Path |
| | RED x 3 | Out of Service |



Diagnostic LED
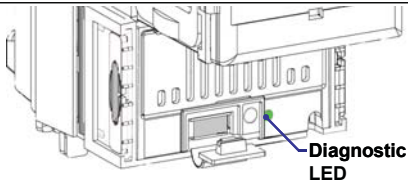
# Configuration Settings

| ON | Inlet LED On: Option Enabled | OFF | Inlet LED Off: Option Disabled |
|---|---|---|---|

## Page 1

**Bill Acceptance**

Bill Inlet LEDs

| $5 | $10 | $20 | $50 | Page 1 *(Flash x1)* |

## Page 2

**Coupons / Security / Bezel Lights**

Bill Inlet LEDs

| Coupons | High Security | Impulse | Smart Bezel™ | Page 2 *(Flash x2)* |

## Page 3

**Bill Acceptance / Orientation**

Bill Inlet LEDs

| 1-Way | 2-Way | 100 | | Page 3 *(Flash x3)* |
| 4-Way (both) | | | | |

## Page 4

**Level 3 Security**

Bill Inlet LEDs

| Level 3 Security | ← *Reserved* → | Page 4 *(Flash x4)* |

# To Configure Options

| # | Action | Mode | Diagnostic Light |
|---|--------|------|------------------|
| 1. | (SERV) Press and release button, Diagnostic LED flashes. | Service | GRN x 2 |
| 2. | Remove Lower Housing | Config | OFF |
| 3. | Set Options As Desired *(see Options Navigation below)* | Config | OFF |
| 4. | Re-install Lower Housing. Inlet LEDs flash 5 times confirming options are saved. | Sales or Ready | GRN |
| 5. | Test Unit to Ensure Proper Setup. | | |

# Options Navigation

| | |
|---|---|
| (SERV) Press once | Scrolls to **next set** of options within current Page. |
| (SERV) Hold for next Page | Scrolls to **next Page** of options. |



**Diagnostic Indicator LED**

(SERV) **Service Mode Button**
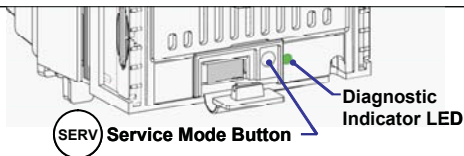
# **Lower Housing Removal**



**2. Push Depressed Button to Back to Remove Lower Housing.**
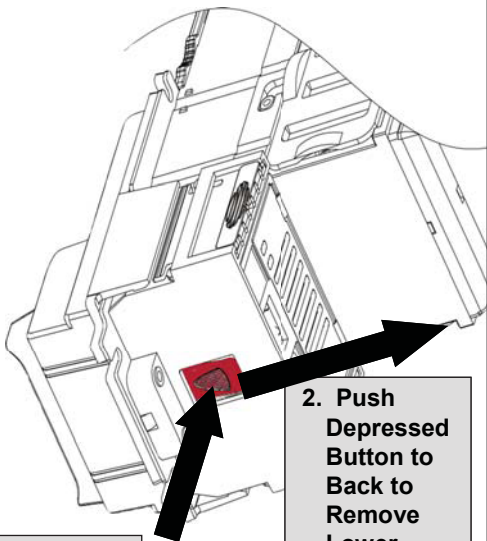
**1. Depress Button Firmly to Release**

# Add / Remove Coupons

| # | Action | Mode | Diagnostic Light | Bill Inlet LEDs |
|---|--------|------|------------------|-----------------|
| 1. | (SERV) Hold button until Diagnostic LED flashes. | Coupon Teach | **GRN** *(flash)* | **GRN** *(flash)* |
| 2. | Insert Coupon to be Added <u>or</u> Removed. | | | |
| *ADD* Coupon | | | | |
| 3a. | Coupon accepted and returned. | Coupon Teach | **GRN** *(fast rate)* | **GRN** *(fast rate)* |
| 4a. | Automatically returns to Sales Mode. Coupon <u>addition</u> complete. | Sales | **GRN** *(solid)* | **GRN** *(cycle)* |
| *REMOVE* Coupon | | | | |
| 3b. | Coupon disabled and returned. | Coupon Teach | **GRN** *(fast rate)* | **GRN** *(fast rate)* |
| 4b. | Automatically returns to Sales Mode. Coupon <u>removal</u> complete. | Sales | **GRN** | **GRN** *(cycle)* |
| Coupon *NOT* Recognized | | | | |
| 3c. | Coupon returned. Inlet LEDs flash at original rate. | Coupon Teach | **GRN** *(flash)* | **GRN** *(flash)* |
| 4c. | Insert another coupon (see Step 2 above) *OR* (SERV) Hold button to return to Sales Mode (note unit returns automatically after 40 secs of inactivity). | | | |

7

# Option / Dip Switch Settings

*Note: There are no switches on MDB only models.*



ON ⇐

1 2 3 4 5 6 7 8

⇒ OFF
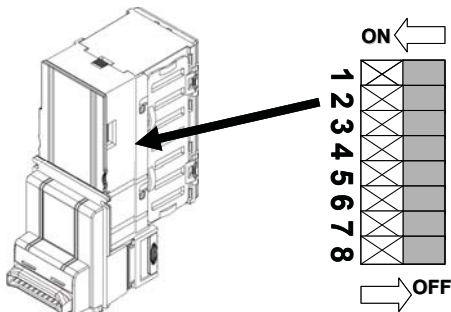
| Pulse Timing | Switch 1 | Switch 2 |
|---|---|---|
| 50 / 50mS | ON | ON |
| 150 / 150mS | ON | OFF |
| Custom | OFF | ON |
| Parallel (Credit Line) | OFF | OFF |

| | ON | OFF |
|---|---|---|
| Switch 3 | 4 Pulse / $ | 1 Pulse / $ |
| Switch 4 | Always Enabled | Host Enabled |
| Switch 5 | Serial | Pulse |
| Switches 6 - 8 | *Reserved* | |

**Note:**
**1. "Custom" has a default setting of 200 / 200mS**
**2. Power must be reset for switch settings to take effect.**

# Quick Release Bezel Operation



**Push Firmly to Release Bezel**
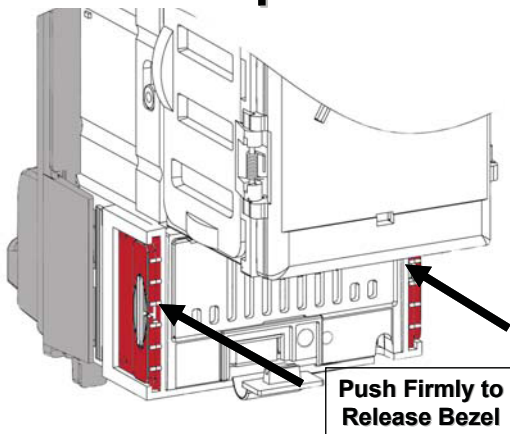
1. Push firmly on Quick Release Tabs using a screwdriver tip. Tabs will move towards bezel and latch.
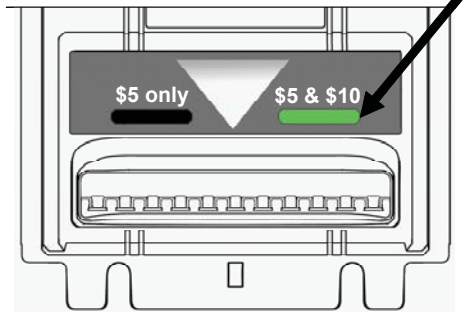2. Once both tabs are latched, the bill acceptor will separate from the bezel.
3. To reattach, push bill acceptor body firmly onto bezel until it locks.

# Smart Bezel™

### *Communicates to Customer Which Bills Are Accepted*

Feature not available on all models.

*Denotes acceptance of both $5 and $10 bills.*



- **$5 & $10 Is Lit When:** *Both bills accepted and change can be made for them.*
- **$5 Only Is Lit When:** *Change can only be made for $5 bills.*

*Note: For correct operation, make sure $5 and $10 bills are enabled (see Configuration Settings).*

*For more information on the Vantage™, please see the Operation and Service Manual, available at www.coinco.com*

Notes

**For technical support on this or any
other Coinco product,
contact your nearest Coinco
Office/ServiceCenter.**

**email: techsupport@coinco.com
www.coinco.com**

SUZOHAPP